


Living Nine

GEBRUIKSAANWIJZING - PAPIERVERSNIPPERAAR
USER MANUAL - PAPER SHREDDER
MANUEL D'UTILISATION - DÉCHIQUEUR DE PAPIER

NL p. 1
EN p. 3
FR p. 5

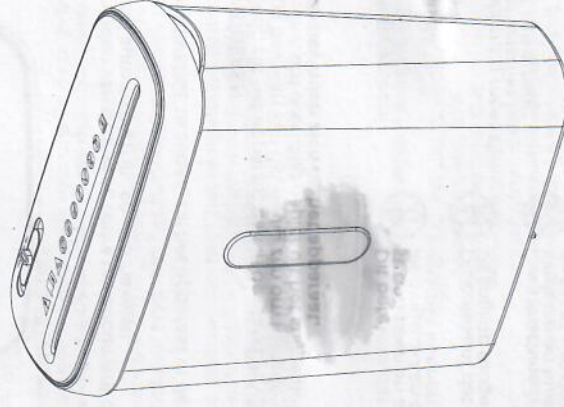


Lees de instructies
Please read the manual
Veuillez lire ce mode d'emploi

OPERATION MANUAL



The safety alert symbol precedes each safety message in this instruction manual and on the product. This symbol indicates a potential personal safety hazard that could hurt you or others, as well as cause damage to the shredder.

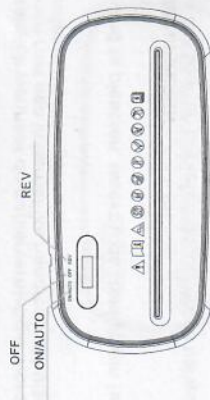

SETTINGS AUTO

Simply insert paper into the center of the inlet, once your document has activated the trigger switch, the unit will turn on and off automatically.

OFF AND REVERSE

Moving the switch to OFF and REVERSE will cause the unit to run in the corresponding direction.

CLEARING JAMS

If a paper jam occurs, switch the unit to the REVERSE position until the paper is out of the cutting wheels. In some cases, it may be necessary to alternate between OFF and REVERSE positions several times to help clear excess paper from the cutting area. Following warnings are located on the unit please be aware of them.



General warning symbol



Follow the instructions in the operating instructions



This means you should be careful if you have long hair which can become entangled in the cutting head. This could cause serious injury.



This means don't reach into the feed opening of the cutting head. This could cause serious injury.



Keep loose jewellery away from the feed



This means be careful of ties and other loose clothing which could become entangled in the cutting head.



This means paper clips must not be inserted into cutting head.



This machine is not a toy, keep children and pets away from the shredder at all time.



Keep aerosol cans and small items away from the shredder.



Moving parts.

- 1) Disconnect the power source prior to disabling or bypassing the equipment safeguard.
- 2) Restore the equipment safeguard before restoring power.
- 3) Unplug the equipment when not in use for an extended period of time.
- 4) AC plug is used to disconnect/connect the equipment, the socket outlet shall be easily accessible.

ELECTRICAL SAFEGUARDS

Unplug your shredder from mains before moving it, emptying the basket, or when it is not in use for an extended period of time.

Do not operate with a damaged power supply cord or plug.

The socket-outlet should be installed near the equipment and be easily accessible.

Close supervision is necessary when the shredder is being used near children, persons suffering from physical impairment or pets.

This shredder should not be used by children.

INSTALLATION

To place the shredder onto your basket, plug the unit into a standard AC outlet.

MATERIALS YOU CAN SHRED

Your shredder will handle most any type of office paper documents. Maximum capacity 6 sheets of 80GSM paper.

IMPORTANT SAFETY INSTRUCTIONS

Your safety as well as the safety of others is important to us. In this instruction manual and on the product are important safety messages. Please read these messages carefully.

DISPOSAL

Please dispose of this product responsibly at approved waste or recycling facilities. Do not dispose of in household waste.

WARNING

If the machine becomes jammed DO NOT attempt to clear the jammed paper with your fingers. Instead, try to clear the jam by feeding another piece of paper through. Should this method be unsuccessful in clearing the paper jam, please turn off and unplug the machine before attempting any alternative methods of removing the jam.

PAPER SHREDDER SPECIFICATIONS

Input: 220-240VAC/50-60Hz

Amperage: 0.7A

Type of cut: Strip Cut

Working width: 220mm

Shred size: 6mm

Max shredding capacity (80gsm): 6 sheets

Shred speed: 2.8 meters/minute

Waste container capacity: 8L