

A Safety instructions

Read the operating instructions completely before using for the first time.

The operating instructions can be found on the Leifheit homepage under www.leifheit.de.

- Use the appliance only as described in these instructions.
- Check the appliance for visible damage on the outside before use. Do not use the appliance if it has visible damage.
- The appliance may not be put into operation if the connecting line or plug are damaged, if it does not function correctly, if it has been dropped or damaged.
- The electric safety of the appliance is only guaranteed when it is used according to the regulations. The manufacturer is not liable for any damage that results from the incorrect use of the appliance. In case of doubt, consult a specialist.
- Where possible, do not use any adapters, multiple sockets and/or extension cables.

If however, this should be necessary, only use adapters, multiple sockets and/or extension cables that comply with the safety guidelines and never exceed the maximum power specified on the adapter.

- Repairs may only be carried out by authorised customer services technicians.
- If the cable is defective, it must be replaced by the manufacturer or authorized service technicians to avoid hazards.
- Never open the appliance single-handedly. The individual components of the appliance must not be disassembled, repaired or altered. There is a risk of electric shock when making contact with live connections or electric components.
- Incorrect repairs may result in significant dangers for the user and cancel any claims under guarantee.
- Make sure that the appliance is switched off before plugging the mains plug into the socket as well as before removing it.
- Do not touch the appliance as well as the mains plug with wet hands.

- Never immerse the appliance in water or any other fluids.
- Persons (including children) with limited physical, sensory or mental abilities or lack of experience should not use this device unless they are supervised appropriately or have been instructed about the resulting hazards.
- This appliance can be used by children from an age of 8 years as well as by persons with limited physical, sensory or physical abilities or with lack of experience or knowledge if they are supervised appropriately or have been instructed in the use of the appliance and the resulting dangers by a responsible person.
- Children must not play with the appliance. Keep the appliance in a safe place out of reach of children. Children must not clean or service the appliance without supervision.
- Always remove the mains plug from the socket when the appliance is not being used, or before cleaning or maintenance..
- Always pull the power cable out of the socket using the plug and not the cable.

- Do not kink the power cable and do not lay it over sharp edges as this would lead to the cable breaking.
- Always use the appliance on stable, level and dry surfaces.
- The appliance is exclusively recommended for use indoors.
- Protect the appliance against intensive heat and do not use the appliance in the vicinity of flammable gases.
- Lubricants do not have to be used on this appliance.
- Before you insert the mains plug of the appliance in the socket, or pull it out, please always check if the cover is unlocked.
- For storage, close the cover only slightly, do not lock it so that the seals do not deform thus impairing the function of the appliance.
- The vacuuming appliance is only suitable for domestic use!