 


**Fellowes**

Personal Laminator

**Lunar™ (A3)**  
**Lunar™ (A4)**

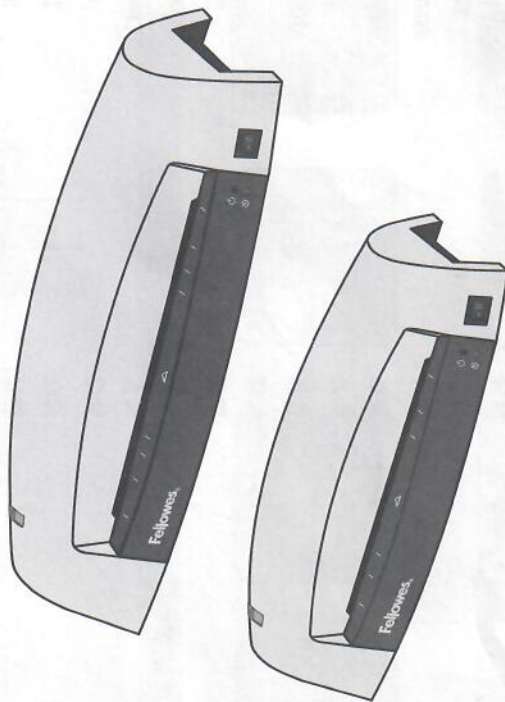

- GB** Please read these instructions before use.  
**FR** Lire ces instructions avant utilisation.  
**ES** Lea estas instrucciones antes de usar la máquina.  
**DE** Diese Anleitungen vor Gebrauch genau durchlesen.  
**IT** Primo dell'uso, si raccomandano di leggere questo manuale di istruzioni.  
**NL** Lees deze instructies zorgvuldig door voordat u de machine in gebruik neemt.  
**SE** Läs dessa anvisningar innan du använder apparaten.  
**DK** Læs venligst denne vejledning før anvendelse.  
**FI** Lue nämä ohjeet ennen käyttöä.  
**NO** Venligst les nøye igjennom denne bruksanvisningen før bruk.  
**PL** Przed użyciem proszę zapoznać się z niniejszą instrukcją.  
**RU** Перед эксплуатацией устройства ознакомьтесь с содержанием данной инструкции.

 
- GR** Αυγάστε τις παρακάτω οδηγίες πριν από τη χρήση.  
**TR** Kullanmadan önce lütfen bu talimatları okuyun.  
**CZ** Před použitím si přečtěte tyto pokyny.  
**SK** Pred použitím si prečítajte tieto pokyny.  
**HU** Kérjük, hogy használat előtt olvassa el az utasításokat.  
**PT** Leia estas instruções antes da utilização.  
**BG** Моля, прочетете инструкциите преди употреба.  
**RO** Va rugăm să citiți instrucțiunile înainte de utilizare.  
**HR** Pazljivo pročitaite ove upute prije korištenja.  
**SI** Pred uporabo izdelek preberite ta navodila za uporabo.  
**SR** Pročitajte ova uputstva pre upotrebu.  
**AR** يرجى التطلع على الإرشادات قبل الاستخدام.  
**HR** Prije korištenja pročitajte ove upute.

## INDEX




### LAMINATOR CONTROLS / QUICK START GUIDE

|            |       |
|------------|-------|
| ENGLISH    | 4     |
| FRANÇAIS   | 5-6   |
| ESPAÑOL    | 7-8   |
| DEUTSCH    | 9-10  |
| ITALIANO   | 11-12 |
| NEDERLANDS | 13-14 |
| SVENSKA    | 15-16 |
| DANSK      | 17-18 |
| SUOMI      | 19-20 |
| NORSK      | 21-22 |
| POLSKI     | 23-24 |
| РУССКИЙ    | 25-26 |
| ΕΛΛΗΝΙΚΑ   | 27-28 |
| TÜRKÇE     | 29-30 |
| ČESKY      | 31-32 |
| SLOVENSKY  | 33-34 |
| MAGYAR     | 35-36 |
| PORTUGUÊS  | 37-38 |
| БЪЛГАРСКИ  | 39-40 |
| ROMÂNĂ     | 41-42 |
| HRVATSKI   | 43-44 |
| SLOVENČINA | 45-46 |
| SRPSKI     | 47-48 |
| العربية    | 49-50 |
| עברית      | 51-52 |
|            | 53-54 |

## LAMINATOR CONTROLS

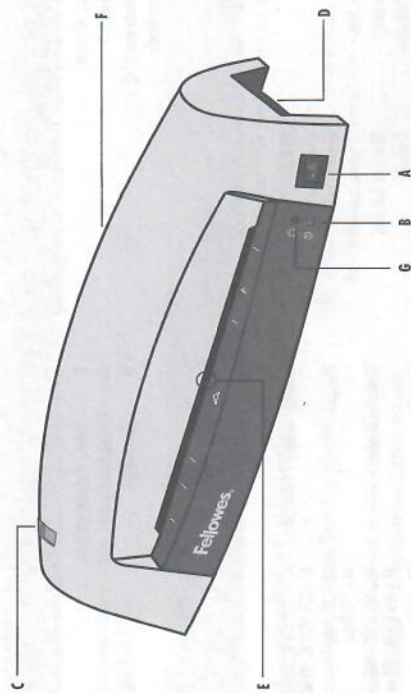

## QUICK START GUIDE

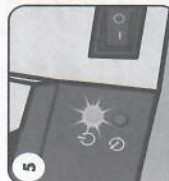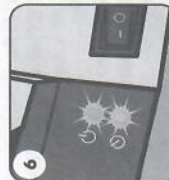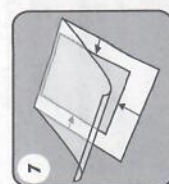   

## LAMINATOR CONTROLS

- A On / off switch  
B Ready LED  
C Release lever (A) (B)  
D Carry handle

## CAPABILITIES

### Performance

|                              |                                |
|------------------------------|--------------------------------|
| Format                       | A3 or A4                       |
| Entry width                  | A3 = 325mm<br>A4 = 240mm       |
| Pouch thickness (min)        | 75 microns (per side)          |
| Pouch thickness (max)        | 80 microns (per side)          |
| Warm up time (estimate)      | 5 minutes                      |
| Cool down time               | 60-90 minutes                  |
| Lamination speed (+/- 5%)    | approx. 30cm/min (fixed speed) |
| Number of rollers            | 2                              |
| Ready indication             | Light                          |
| Release lever                | Yes                            |
| Clear Path / Anti-jam engine | Yes                            |

### Technical Data

|                                              |                                                                    |
|----------------------------------------------|--------------------------------------------------------------------|
| Voltage / Frequency / Current(Amps)          | A3 = 220-240V AC, 50/60Hz, 1.2A<br>A4 = 220-240V AC, 50/60Hz, 1.0A |
| Wattage                                      | A3 = 220 Watts<br>A4 = 155 Watts                                   |
| Dimensions (HxWxD)                           | A3 = 495 x 160 x 105 mm<br>A4 = 400 x 160 x 105 mm                 |
| Net weight                                   | A3 = 1.5 kg<br>A4 = 1.2 kg                                         |
| Max document thickness (laminating capacity) | .021"/0.55 mm                                                      |

## IMPORTANT SAFETY INSTRUCTIONS - KEEP FOR FUTURE USE

- The machine is for indoor use only. Plug the machine into an easily accessible socket.
- To prevent electrical shock - do not use the appliance close to water, do not spill water on to the appliance, power cord or wall socket.
- DO NOT leave the power cord in contact with hot surfaces.
- DO NOT leave power cord hanging from cupboards or shelves.
- DO NOT use appliances if the power cord is damaged.
- DO NOT attempt to open or otherwise repair the machine.
- DO NOT exceed the machine's quoted performance.
- DO NOT allow children to use this machine without adult supervision.
- DO NOT laminate sharp or metal objects (eg: staples, paper clips).
- DO NOT laminate heat-sensitive documents (eg: tickets, ultrasounds etc) on hot settings.
- DO NOT laminate with self-adhesive pouches on hot settings.
- DO NOT laminate on empty pouch.
- Always test laminate with a similar size and thickness before final process.
- Prepare pouch and item for lamination. Place item within pouch centred and touching the leading sealed edge. Ensure the pouch is not too large for the item.
- If required, trim excess material from around the item after lamination and cooling.
- For best results, use Fellowes® brand pouches: Enhance 80
- This machine does not need a carrier to laminate. It is a carrier-free mechanism.
- Always put the item to be laminated into the appropriate sized pouch.

## FEATURES & TIPS



### Release function

To remove or re-align a pouch during lamination, activate the release lever located on the top of the machine. The pouch can only be removed from the entry slot when the lever is activated.

- For best results, use Fellowes® brand pouches: Enhance 80
- This machine does not need a carrier to laminate. It is a carrier-free mechanism.
- Always put the item to be laminated into the appropriate sized pouch.

## SETTING UP THE LAMINATOR

- Ensure the machine is on a stable surface.
- Check there is enough clear space (min 50cm) behind the machine to allow items to pass through freely.
- Plug the machine into an easily accessible main socket.

## HOW TO LAMINATE

- Switch the power on (located at the front of the machine).
- The red 'Power on' lamp will light up. The machine is now heating up.
- When the machine is ready, the green 'Ready' lamp will remain on.
- Place the document into the open pouch. Ensure the document is centred against the sealed edge. Use the appropriate pouch size for the document.
- Ensure the pouch enters the machine sealed edge first. Keep the pouch straight and central within the slot, not on an angle. Use the entry markings as a guide.
- Upon exit, the laminated pouch may be hot and soft. To prevent jamming remove the pouch immediately. Place pouch on to a flat surface to cool. Take care when handling a hot pouch.
- To release a pouch during lamination, activate the release lever located on the top of the machine. Gently pull pouch out of machine.

## NEED HELP?

Let our experts help you with a solution.

Customer Service... [www.fellowes.com](http://www.fellowes.com)

Always call Fellowes before contacting your place of purchase, see the rear cover for contact details.

Consider registering your machine at [www.fellowes.com/register](http://www.fellowes.com/register) to receive updates and additional information.

## TROUBLESHOOTING

| Problem                                         | Possible cause                         | Solution                                                                  |
|-------------------------------------------------|----------------------------------------|---------------------------------------------------------------------------|
| No 'power on' lamp (red LED)                    | Machine not switched on                | Switch on machine at front and at the wall socket                         |
| No 'ready' lamp after a long period (green LED) | Machine is in a hot or humid area      | Move the machine to a cooler and dry area                                 |
| Pouch does not completely seal the item         | Item may be too thick to laminate      | Check pass through thickness is correctly selected and pass through again |
| Pouch has waves or bubbles                      | Temperature setting may be incorrect   | Check pouch thickness is correctly selected and pass through again        |
| Pouch is lost in the machine                    | Pouch is jammed                        |                                                                           |
|                                                 | Pouch was used 'open end' first        |                                                                           |
|                                                 | Pouch was not centred on entry         | Select reverse button and pull out the item by hand                       |
|                                                 | Pouch was not straight upon entry      |                                                                           |
| Jamming                                         | Empty pouch was used                   |                                                                           |
|                                                 | Damaged rollers or adhesive on rollers | Pass cleaning sheets through the machine to test and clean rollers        |
| Pouch is damaged after lamination               |                                        |                                                                           |

## STORAGE & CLEANING

Switch off the machine at the wall. Allow the machine to cool. The outside of the machine can be cleaned with a damp cloth. Do not use solvents or flammable materials to polish the machine. Cleaning sheets can be purchased for use with the machine. When the machine is warm - run the sheets through the machine to clean any residue off the rollers. For optimum performance, it is recommended that cleaning sheets are used with the machine regularly. (Cleaning sheet order codes #532061)